

EYEZONE P070-3


User Manual



CONTENTS

1. Package Contents.....	1
2. Introduction.....	1
3. Features.....	2
4. Hardware Overview.....	2
5. Remote Control.....	3
6. Setting Up.....	4
6.1 SLIDE SETUP.....	4
6.2 MUSIC SETUP.....	4
6.3 MOVIE SETUP.....	4
6.4 SLIDESHOW SETUP.....	5
6.5 PREFERENCE.....	5
7. Using the P070-3.....	6
7.1 Play Picture File.....	6
7.2 Play Music File.....	7
7.3 Play Movie File.....	8
7.4 File Library.....	9
7.5 Hot Key.....	9
8. Motion Detection Function.....	10
9. Troubleshooting.....	11

1. PACKAGE CONTENT

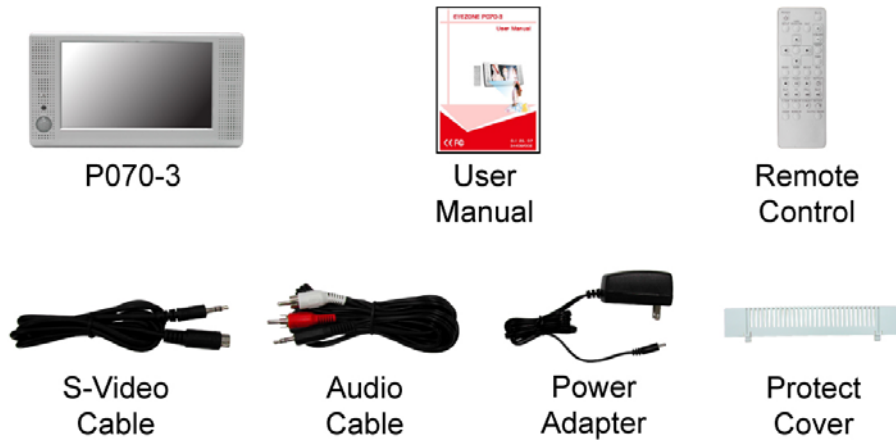

1. P070-3
2. User Manual
3. Remote Control
4. S-Video Cable
5. Audio Cable
6. Power Adapter (12V, 1.5A)
7. Protect Cover

2. INTRODUCTION


The Eyezone P070-3 is a digital signage that plays picture, music and video without a computer. It uses media files from CF, SD, MMC and MS (Pro) memory card and displays them on a 7" TFT-LCD with audio-out from the built-in speakers. It also has S-Video and Audio input as for the display.

With the built-in motion detector, the Eyezone P070-3 will play the demo files automatically after sensing approaching subjects. The portable Eyezone P070-3 is an ideal Digital Signage Display solution for advertising, presentations, training, and other media applications.


3. FEATURES

- Supports multiple file formats: Picture, Music and Video.
- Supports CF, SD, MMC and MS (Pro) memory card.
- Built-in 7" TFT-LCD display and stereo speakers.
- Supports S-Video and Audio input to connect to DVD player or video game player.
- External color and brightness adjustment control buttons.
- Includes a full-function infrared remote control.
- Built-in Motion Detector:
 - The Eyezone P070-3 will play the demo file automatically after sensing approaching subjects.
 - Sensing distance is up to 3 meters with an angle of 60°
- Multi-Language OSD : English, French, German, Italian, Portuguese, Spanish, Netherlands, Japanese and Chinese.
- Supports SLIDE SHOW Function: With 14 kinds of transition effects.
- Supports SLIDE TIME (INTERVAL) Mode : Interval time with 1, 3, 5, 10, 30, 60 seconds.
- Supports MUSIC SLIDE Show : Music and pictures play at the same time.
- Supports ZOOM IN (ON) 4x & PAN, ROTATE, MIRROR, PREVIEW and REPEAT.

4. HARDWARE OVERVIEW

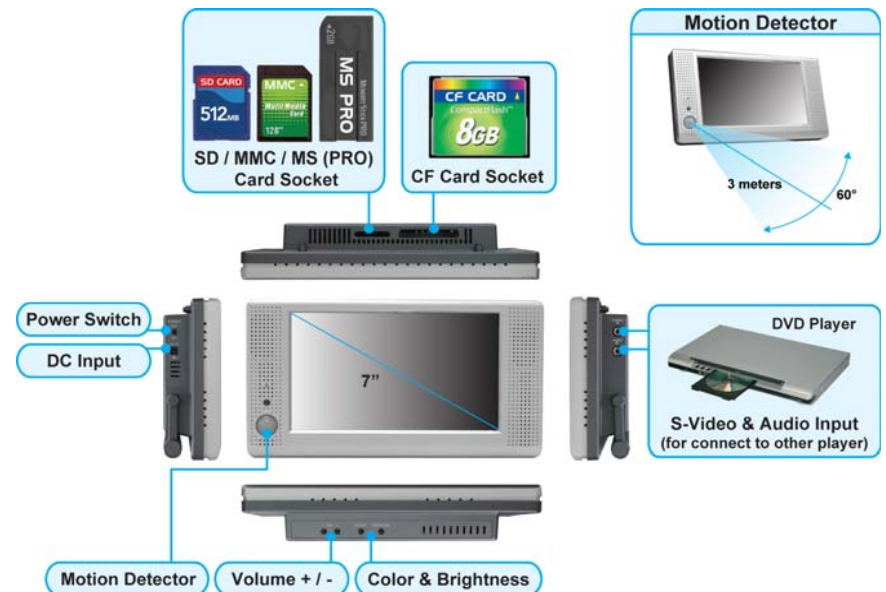


5. REMOTE CONTROL

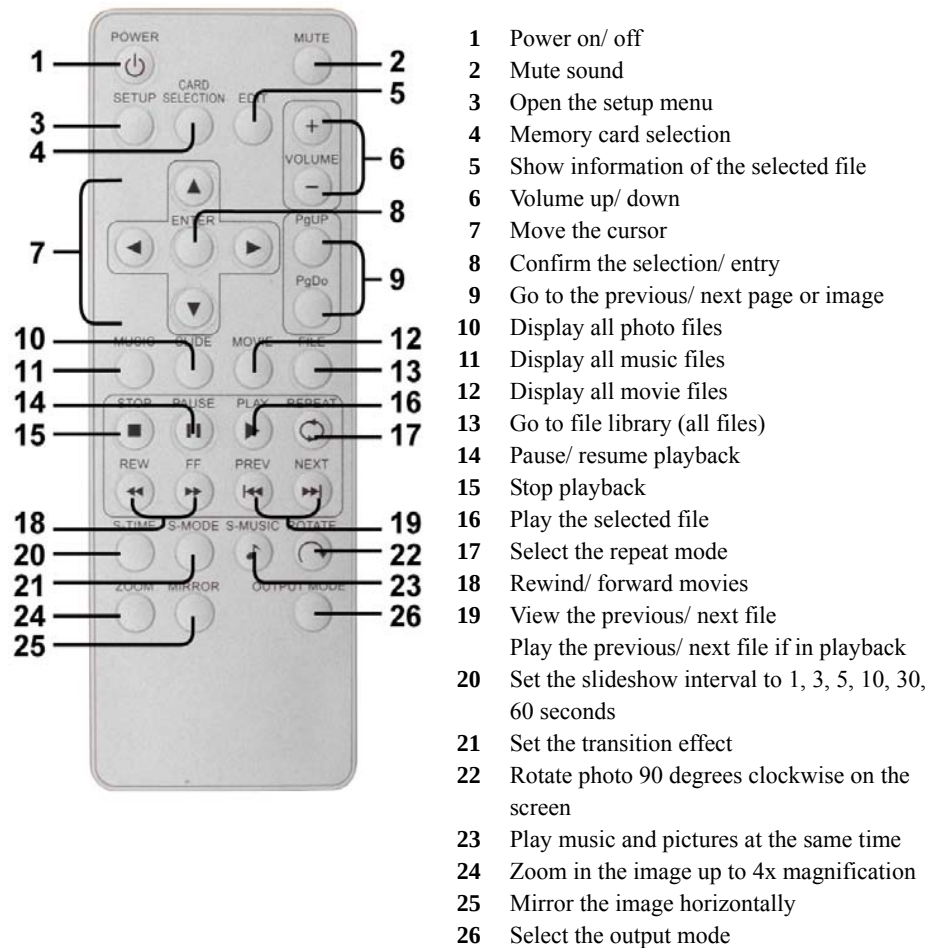


6. SETTING UP

- Press the “SETUP” button on the remote control to open the “SETUP MENU – MAIN PAGE” shown in the following figure. There are five groups of sub-menu in the setup menu.
- Use the “▲、▼、◀、▶” buttons to select an item or to adjust values, and use the “ENTER” button to go into the function or to confirm the command.

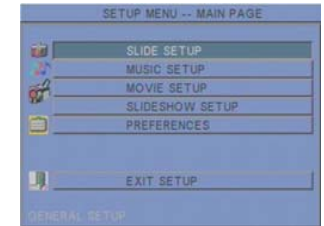


6.1 SLIDE SETUP

- **THUMBNAIL DIGEST** : Thumbnails load faster and allow you to browse photos easily.
- **DIGEST STYLE** : Choose the slide preview mode. (2x2 / 3x3)

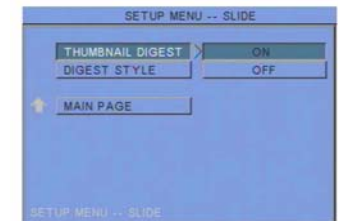


6.2 MUSIC SETUP

- **REPEAT MODE**
 - **ONE** : Repeat the selected song.
 - **ALL** : Repeat all the songs on the memory card.
 - **OFF** : Turn off the repeat function.

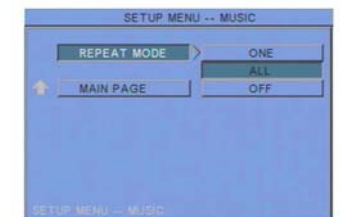


6.3 MOVIE SETUP

- **REPEAT MODE**
 - **ONE** : Repeat the selected movie.
 - **OFF** : Turn off the repeat function.
 - **ALL** : Plays all the movies on the memory card.
- **DIGEST STYLE** : Choose the movie preview mode. (2x2 / 3x3)

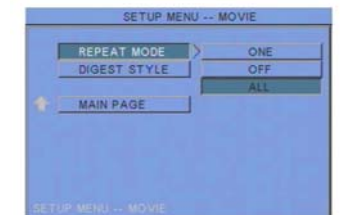


6.4 SLIDESHOW SETUP

- **SLIDESHOW MODE** : Set the slideshow to start automatically.
- **FOLDER REPEAT** : Set all files (picture, music or movie) in the folder to show only once or continuously (loop).
- **INTERVAL TIME** : Set the time each photo is shown to 1, 3, 5, 10, 30 or 60 seconds.
- **TRANSITION (EFFECT)** : Set the transition effect and auto slide with sequential or random playback.
- **AUTO START** : Enable/ disable auto playing media files on the memory card when the device is turned on.

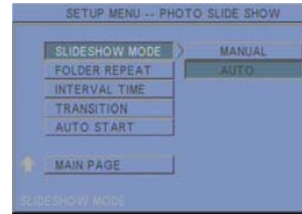

6.5 PREFERENCE

- **TV TYPE**: Choose the TV TYPE.
 - **MULTI . SYSTEM** : Set the TV type automatically.
 - **NTSC**: Set the TV type to NTSC.
 - **PAL**: Set the TV type to PAL.
- **VIDEO OUTPUT** : Select the video output mode.
- **SCREEN TYPE** : Set the screen type to 16 : 9 or 4 : 3.
- **OSD LANG**: Select the OSD language (ENGLISH, FRENCH, GERMAN, ITALIAN, JAPANESE, PORTUGUESE, SPANISH and NEDERLANDS).
- **OSD MESSAGE**: Turn the OSD message function on/ off.
- **RESET**: Reset all settings to the original (factory) settings.
- **FIRMWARE** : New F/W can upgraded from the memory card.
 - **EDITION** : Show the F/W versions.
 - **UPDATE** : Used to update the F/W.

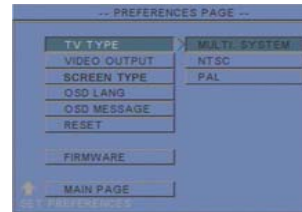


7. USING THE P070-3

Copy files (music, picture and movie) to the memory card first.



7.1 PLAY PICTURE FILE

Step 1: Press the “SLIDE” button on the remote control from any menu.

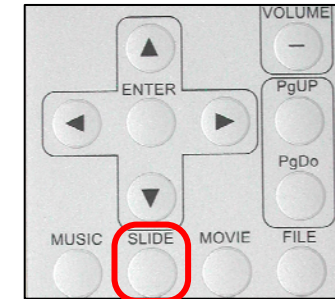

Step 2: The preview mode will show all the picture files on the memory card.

Use the “▲、▼、◀、▶” buttons to select the picture file, and press the “ENTER” button to play the picture file.

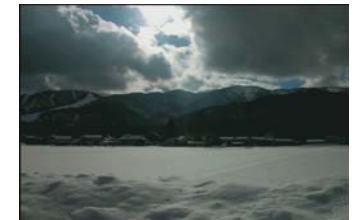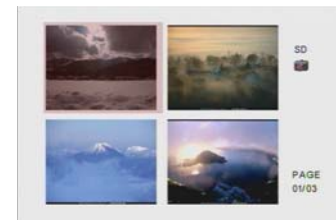

Step 3: If the “SLIDESHOW MODE” is disabled, press the “NEXT” button to play the next picture file, the “PREV” button to play the previous file.



7.2 PLAY MUSIC FILE

Step 1: Press the “MUSIC” button on the remote control from any menu.



Step 2: The “MUSIC LIBRARY” will show all the music files on the memory card.

Use the “▲、▼” buttons to select the music file, and press the “ENTER” button to play the music file.




Step 3: Press the “NEXT” button to play the next music file, the “PREV” button to play the previous file.




7.3 PLAY MOVIE FILE

Step 1: Press the “MOVIE” button on the remote control from any menu.

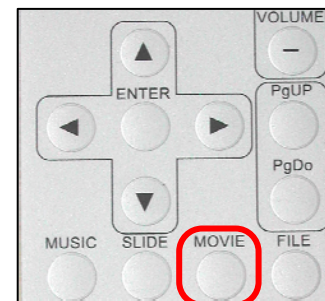

Step 2: The preview mode will show all the video files on the memory card.

Use the “▲、▼、◀、▶” buttons to select the movie file, and press the “ENTER” button to play the movie file.

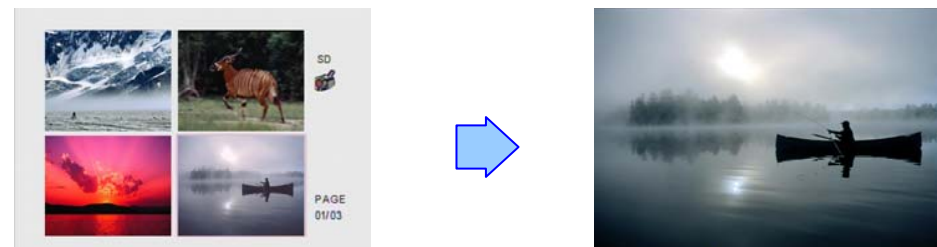


Step 3 : Press the “NEXT” button to play the next movie file, the “PREV” button to play the previous file.




7.4 FILE LIBRARY

Step 1 : Press the “FILE” button on the remote control from any menu.

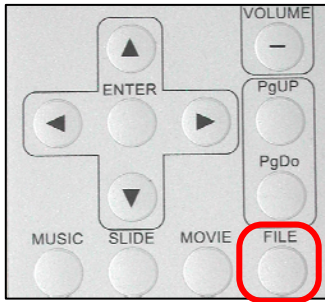


Step 2 : You can see all the files (including picture, music and movie) on the left panel of the “FILE LIBRARY”. Press the “▲ 、 ▼” buttons to select a file, and the information of the file will be shown on the right panel.

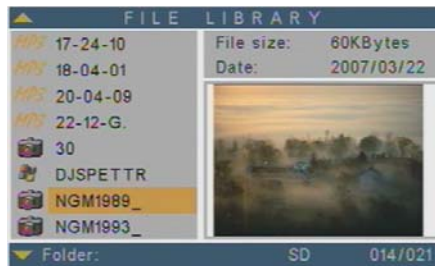

7.5 HOT KEY

You can use the “S-TIME”, “S-MODE” or “S-MUSIC” hot key on the remote control without selecting from the “Setup Menu”. (These functions are only used for playing picture files.)

- **S-TIME** : Interval time with 1,3, 5,10, 30, 60 seconds.
- **S-MODE** : With sequential, random auto slide shows etc 14 kind of selections
- **S-MUSIC** : Play the picture and music files at the same time.




8. MOTION DETECTION FUNCTION

- Insert the memory card with demo files to the P070-3.



NOTE : The first file in the list of File Library will be identified as default file.

For Example :

There are 6 demo files on the memory card. The file names are **a01.xxx**, **33.xxx**, **b55.xxx**, **1abc.xxx**, **07.xxx** and **A03.xxx** (xxx is extension of the file). The file 07.xxx will be identified as default file.

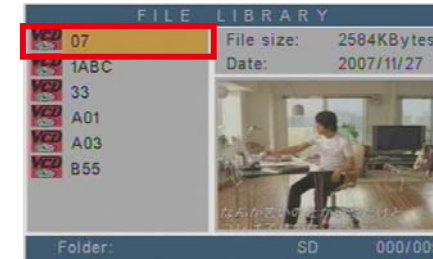

- Check the “SENSOR” function is enabled first.
“SLIDESHOW SETUP” → “AUTO START” → “SENSOR”.

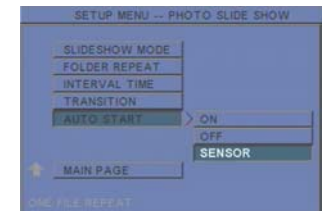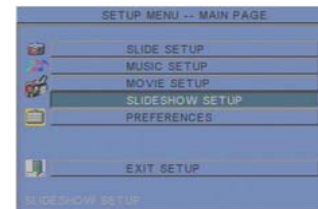

- The P070-3 will auto play the default file (07.xxx) repeatedly when powered on.
- After sensing approaching subjects, the P070-3 will auto play all the demo files (excluding the default file) once.
- When all the demo files finishes playing, the P070-3 resumes playing the default file repeatedly till the built-in motion detector detects any motion.

9. TROUBLESHOOTING

Situation	Check Point
No Picture	1. Check if the power supply is connected. 2. Make sure the P070-3 is turned on.
No response from the remote control	1. Make sure there is a clear view between the remote control and the device. 2. Change the remote control's batteries.
Memory card	1. Push cards gently and securely. 2. If the card does not insert easily, check the direction. 3. Confirm format of the card. P070-3 supports CF, SD, MMC and MS (Pro) memory card.
No sound	1. Check if the mute function is on. 2. Check if the volume is turned up.